

PORSCHE

Steering Wheel Levelling Device

“out of airbag area”

WE 1343




1 Left steering wheel contour Right steering wheel contour 2



Front view:


- 3 Inclinometer direction 4 Measured value 5 Display

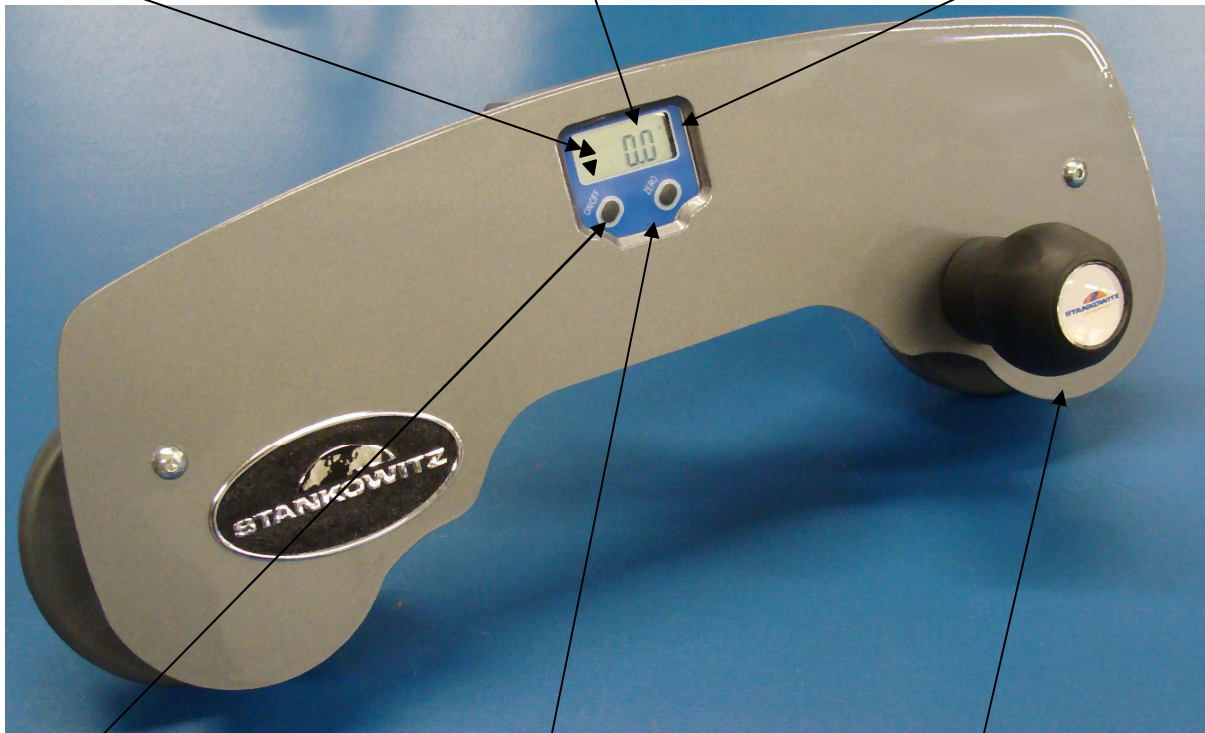

- 6 Button „ON/OFF“ 7 Button „ZERO“ 8 Operating knob

Rear view:

- 9 Right fixed roller 10 Battery chamber 11 Left spring mounted roller

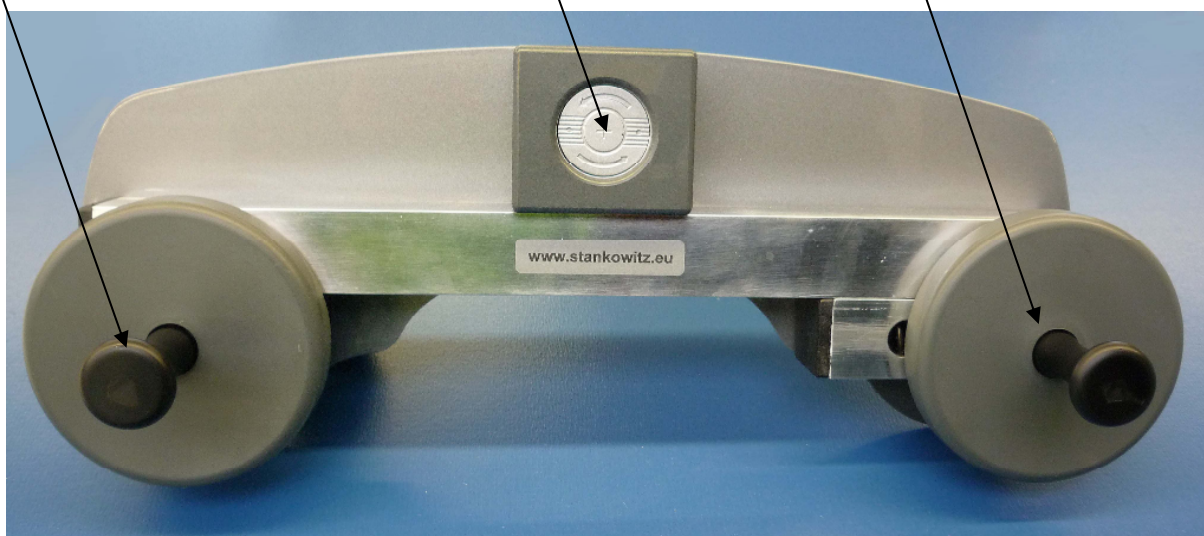

Application:

- Pick the operating knob (8) with the right hand and insert the left spring mounted roller (11) into the left steering wheel contour (1).
 - Push the device with the operating knob (8) into left direction.
 - Lower the right fixed roller (9) into the right contour (2) of the steering wheel and let the operating knob (8) retract to base position.
 - Now, the Steering Wheel Levelling Device is ready for operation.
-
- Activate the angle gauge with the „ON/OFF“ button (6).
 - The ▲▼ on the left side of the display show the inclination direction. (3).
 - These direction arrows simplify the levelling to 0,0°.
 - The measurement (4) is shown in the display (5).
 - Level the steering wheel until the display shows 0,0.
 - Deactivate the angle gauge with the „ON/OFF“ button (6).
-
- **CAUTION: Do NOT push the „ZERO“ button!**
By pushing the „ZERO“ button (7), the zero point is deviated and the device needs to be re-adjusted to 0,0° on a plain surface.

Technical data:

- Measurement range: +/- 90°
- Resolution: +/- 0,1°
- Power supply: 3V CR2032
Lithium battery

Battery change:

- Turn the cover plate (10) on the rear side of the device against clockwise direction.
- The cover plate is now unlatched and the battery can be removed.
- Insert the new battery (type CR2032).
- Look out for the correct polarity.
- Plus is visible when the plate is open.
- Close the chamber with the cover plate.
- Turn the plate under pressure into clockwise direction until it is locked up.

Security and general advice:

- Read this manual attentively and keep it. Damages, which are caused by non-observance of the manual, lead to a withdrawal of the guarantee.
- Avoid any extraordinary mechanical forces to the device.
- Do not expose the device to too high (+45° C) or too low (-5° C) ambient temperatures.
- Do not place the device close to hot objects.
- Take care of the correct handling and storage.

Cleaning:

- Only clean the device with a soft cloth. Do not use hard or sharp-edged objects, chemicals or etching liquids, sprays etc.

Technical support:

If assistance is required or any questions concerning handling occur, please contact our technical service.

Stankowitz Test Equipment GmbH
Siemensstraße 7
49356 Diepholz – Germany

Phone: +49 5441 6443
Fax: +49 5441 5600

www.stankowitz.eu
info@stankowitz.eu